

video**NEXT**.®

JetStreamVS

Quick Start Guide
Configurations

Contents

User Management Configuration	3 - 5
Open Sessions Configuration	6
Video Wall Configuration	7
Face Recognition Watchlist	8
License Plate Recognition Watchlist	9

User Management Configuration

Where to find User Management

1. Start by going to the  **Configuration** on the Navigation Panel
2. Open  **User Management**

Using User Management

Adding a New User

1. Press the add user icon  to begin adding a user
2. In the Add user dialog box start with selecting an **Admin or Operator Role**

Admin	Operator
Full access rights to change anything in the system	Limited rights to the system and can only perform a limited set of operations

3. Enter **Username/Login**
4. Enter **Password** and confirm
5. Press 
6. The new user will show up on the users list

Edit User Info

1. Select the user that is being edited
2. Press the edit user icon  to edit the selected user
3. Once finished, press  to confirm changes

Username	Role
Admin_User	Admin
Operator_User	Operator



Add user dialog

Role

Username/Login

Password

Confirm Password

Edit user dialog

Obj
*****_*****_*****_*****_*****

Role

Username

Description


 

User Management Configuration

Using User Management


Deleting a User

1. Select user that is being deleted
2. Press the delete user icon  to delete a user
3. Press  from the pop-up prompt to finalize the user deletion
4. A green notification should show up to confirm the user has been deleted

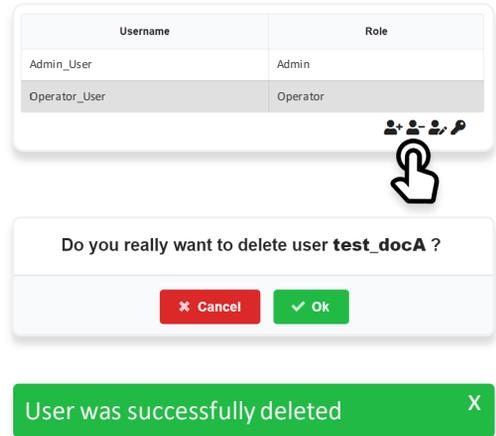

Change User Password (Admin)

1. Select user to change password
2. Press the key icon  to enter password settings
3. In the Change user password dialog box select **Change password**
4. Enter the current password then enter the new password and confirm it
5. Press 

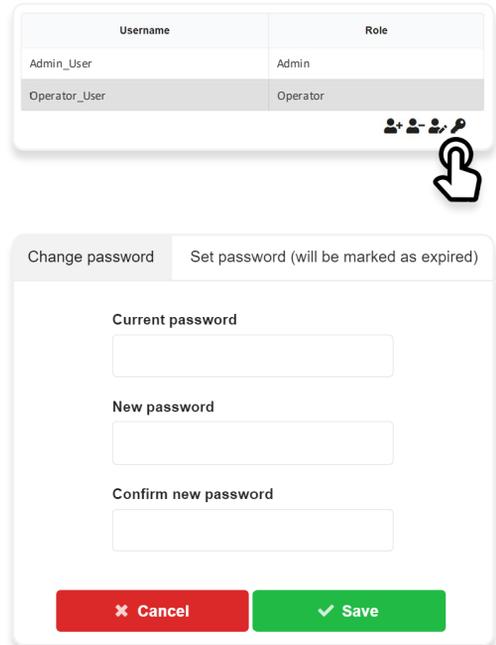

For **User Set Password** go to page 5

User Management Configuration

Using User Management

Change User's Own Password

1. Select user to change password
2. Press the key icon  to enter password settings
3. In the Change user password dialog box select **Set password (will be marked as expired)**
4. Enter the user's old password and confirm it
5. Press 

Username	Role
Admin_User	Admin
Operator_User	Operator



Change password | Set password (will be marked as expired)

New password

Confirm new password

Password was successfully set 

6. When the user signs in they will be prompted that their password has expired
7. The user must press **Change password** to set an up-to-date password

Password expired

[Change password](#)

Password expired

[Change password](#)

Current password

New password

Confirm new password

Open Sessions Management

Where to find Open Sessions

1. Start by going to the  **Configuration** on the Navigation Panel
2. Open  **Open Sessions**


Using Open Sessions

Ending a User's Open Session

1. Press on the user that will have their session ended

 When the user is pressed on their system details will be displayed bellow

2. Press  to end user's session
3. The user's session will be terminated and will immediately take them to the login page

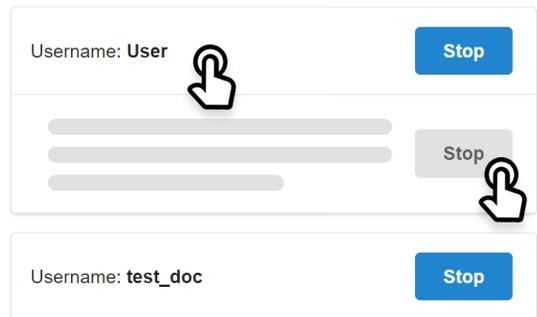

Video Wall Configuration

Where to find Video Wall Configuration


1. Start by going to the  **Configuration** on the Navigation Panel
2. Open  **Video Wall Configuration**

Setting Up Video Wall

Configuration

1. Enter a name into the Video Walls
2. Under Monitors select the active monitors to be added to the Video Wall

 Monitors are added through the `Display_Server` via SSH in PuTTY


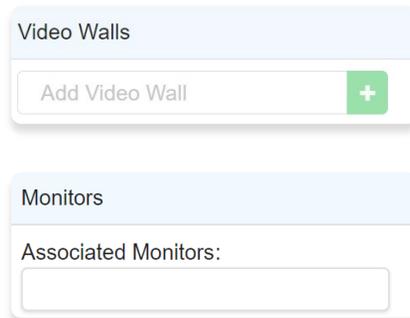


Dashboard

1. Go to  **Dashboard**. Press 
2. Select the desired **Wall**¹ and **Monitor**², then select the type of **Split**³
3. Drag and drop camera into the desired empty space

 Only Avatar cameras can be used in the Video Wall. CloudDIRECT is not Compatible

 **Note:** Only a snapshot of dropped camera will appear. Live video is only shown on the Display Server

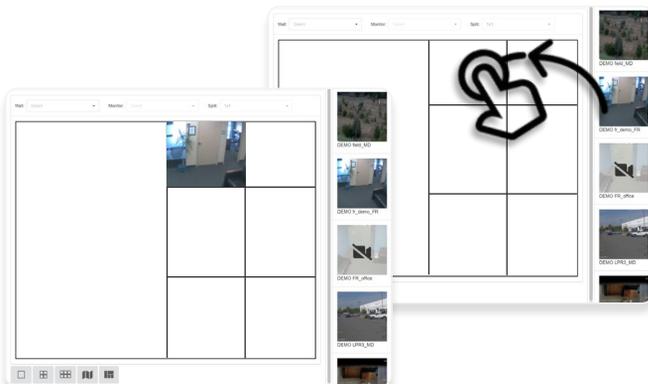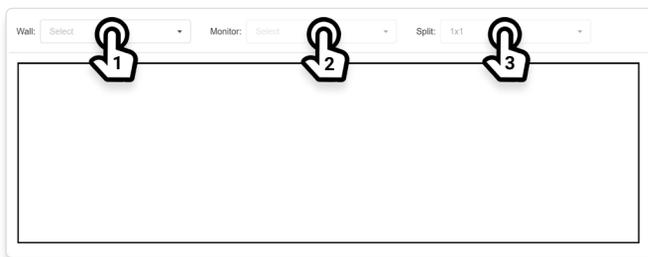

Face Recognition Watchlist

Where to find the Face Recognition Watchlists

1. Start by going to the  **Configuration** on the Navigation Panel
2. Open  **Face Recognition Watchlist**

Setting Up Face Recognition Watchlists

When to use Alert or Ignore Watchlists

Alert WL	Ignore WL
Triggers an alert whenever the listed face is detected	When the listed face is detected the system will ignore it


Alert/Ignore Watchlist Set Up

1. Enter a Name to add to the watchlist
2. Click or drag and drop sample photos on the '+' to upload them. These photos will be used as a reference
3. Set and confirm an Expiration date for the photos

 After the photos have reached their expiration date, they will automatically be deleted

4. A person is now added into the Alert or Ignore Watchlist

 Add as many people desired to the watchlist by starting a new entry

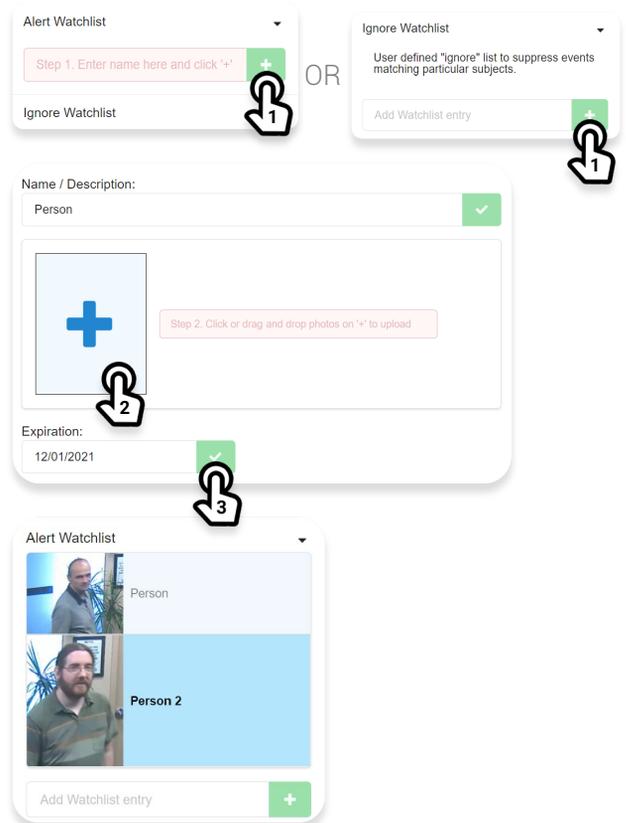

License Plate Recognition Watchlist

Where to find the LPR Watchlist

1. Start by going to the  **Configuration** on the Navigation Panel
2. Open  **License Plate Recognition Watchlist**

Setting Up LPR Watchlists

When to use Alert or Ignore Watchlists

Alert WL	Ignore WL
Triggers an alert whenever the listed license plate is detected	When the listed license plate is detected the system will ignore it

Alert/Ignore Watchlist Set Up

1. Enter a Name/Description to add to the watchlist
2. Enter the Plate Text of the license plate being added
3. Set and confirm an Expiration date

 After the photos have reached their expiration date, they will automatically be deleted

4. Press 
5. A license plate is now added into the Alert or Ignore Watchlist

 Add as many LPs desired to the watchlist by starting a new entry

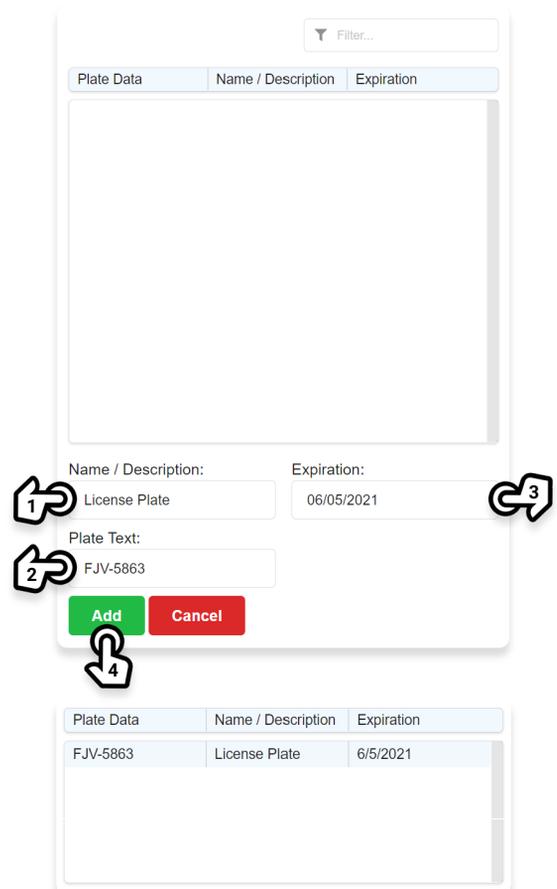


Plate Data	Name / Description	Expiration
------------	--------------------	------------

Name / Description: License Plate

Expiration: 06/05/2021

Plate Text: FJV-5863

Add **Cancel**

Plate Data	Name / Description	Expiration
FJV-5863	License Plate	6/5/2021



video**NEXT.**